



# Electric Floor Heating System **ゆかい〜な**

## YCT-16/32 Cover Type Operation Manual

Thank you for purchasing our product "Yukaiina."  
Before use, please read this operation manual thoroughly

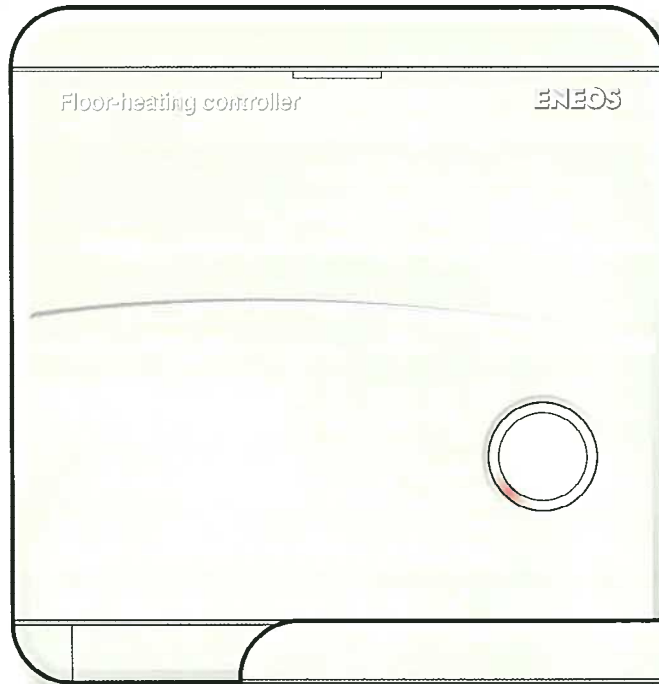

Controller  
YCT-16  
Cover Type

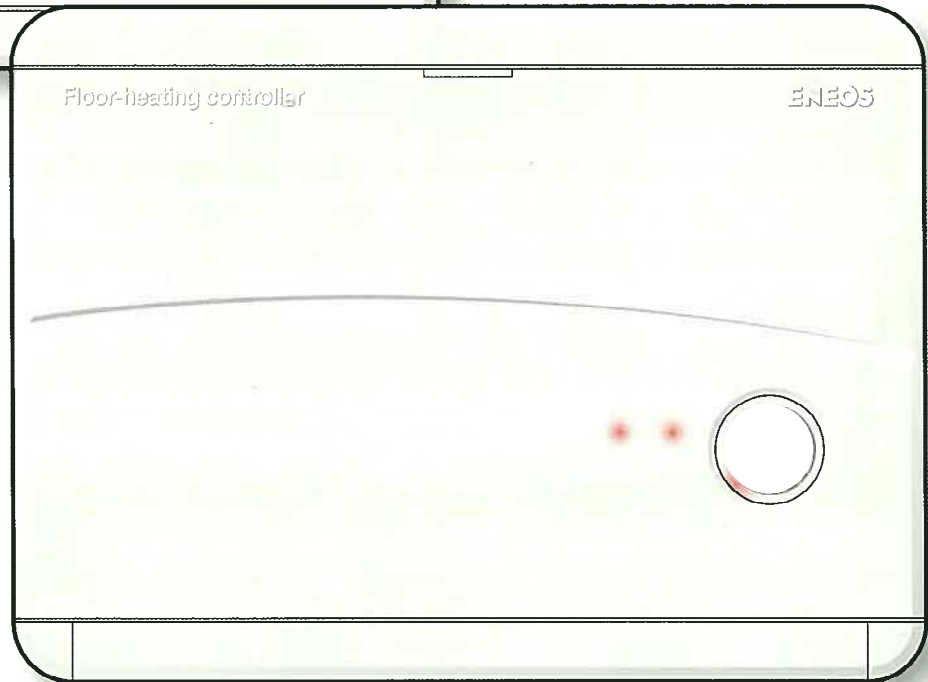

Controller  
YCT-32  
Cover Type



エネルギーを、ステキに。 **ENEOS**


[www.eneos.co.jp](http://www.eneos.co.jp)

# Contents

Contents, Precautions before use	1
Part names and functions ■ YCT-16 Cover Type	2
■ YCT-32 Cover Type	3
Using the controller	
1 Setting time	4
2 Setting temperature	4
3 Operation	4
4 Setting Timer 1/Timer 2	5
5 Setting timer operation	6
6 Setting operation range	6
7 When the operation lamp blinks	6
Troubleshooting	7
Ratings and specifications	7

## The following must be observed When using the product, observe the following to prevent injury or accident.

**1** Do not sleep on the floor heating for long periods of time. It may cause low temperature burns.

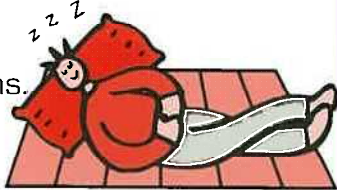

\* Especially, infants, disabled persons, and persons with sensitive skin require extra caution.

**2** Do not scratch the floor with an edged tool or drive a nail into it.




\* It may cause electric leakage or electric shock.

**3** When water or coffee is spilled on the floor, wipe it off immediately.



\* Failure to do so may cause electric leakage or electric shock.

**1** Putting an object as shown below that prevents heat radiation on the floor heating may delay heating.

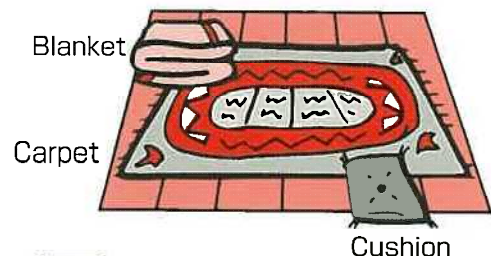


Blanket

Carpet


Cushion

**2** Do not place a heavy object such as a piano or bed on the floor. If you need to, use plates below the legs to disperse the weight.

10cm square plate

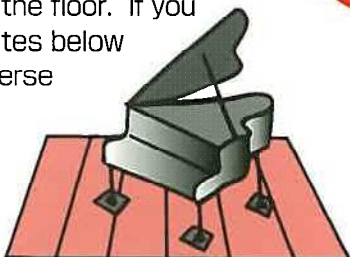

**Caution**

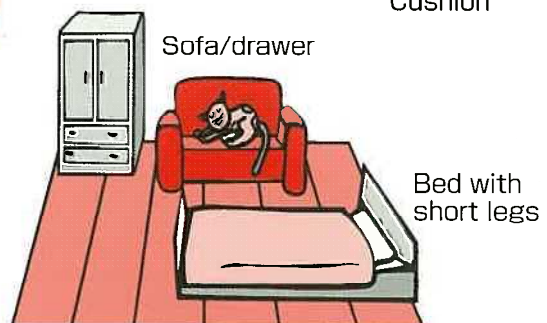


Sofa/drawer

Bed with short legs

# Part names and functions

## YCT-16 Cover Type

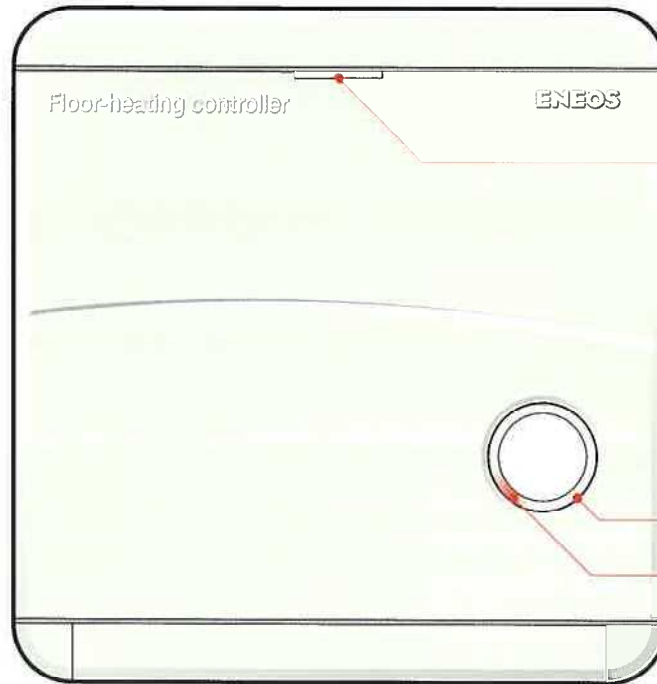

Open/Close knob

Operation key

Operation lamp

Time display


Timer setting mode switch lamp

Timer input selection key

Timer setting value up key

Timer setting value down key

Timer entry key

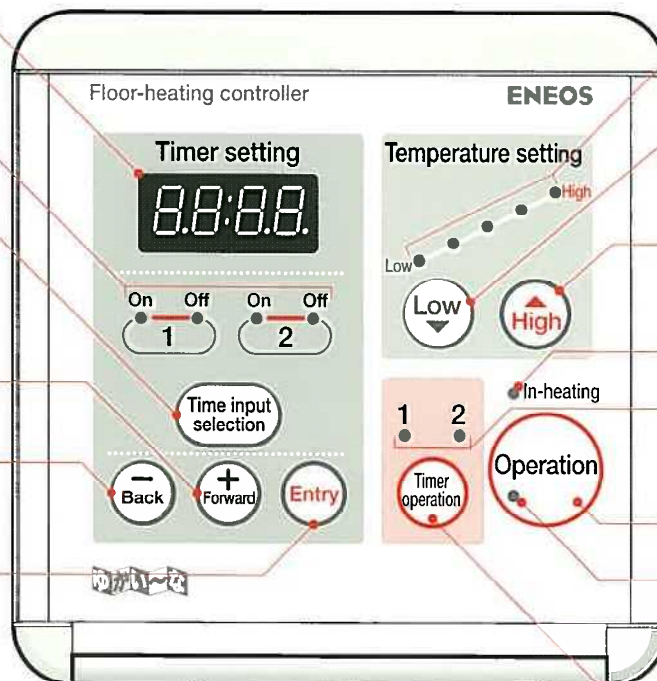

Temperature setting 5-level lamp

Temperature setting value down key

Temperature setting value up key

Heating lamp

Timer 1/Timer 2 operation lamp



Operation key

Operation lamp

Timer operation selection key

# Part names and functions



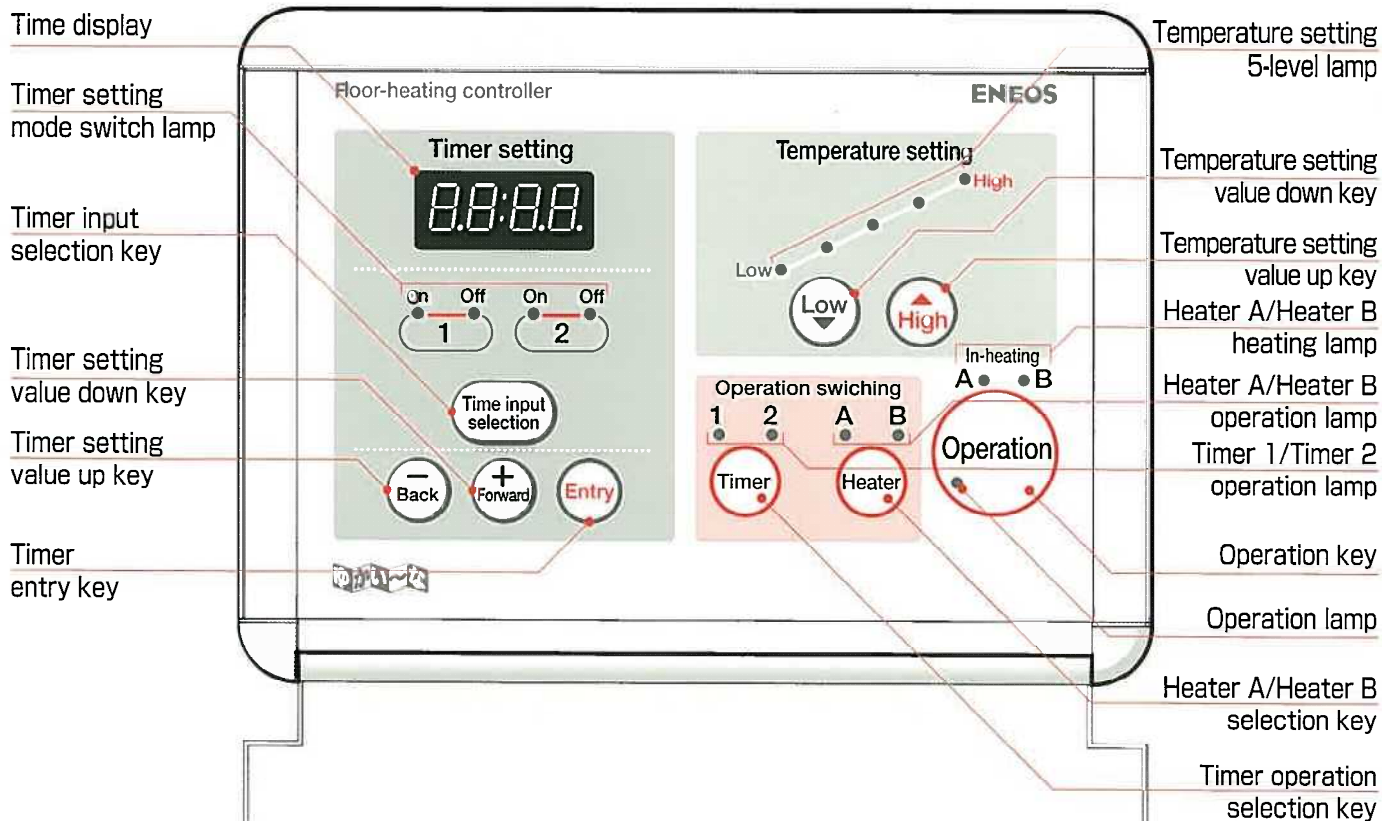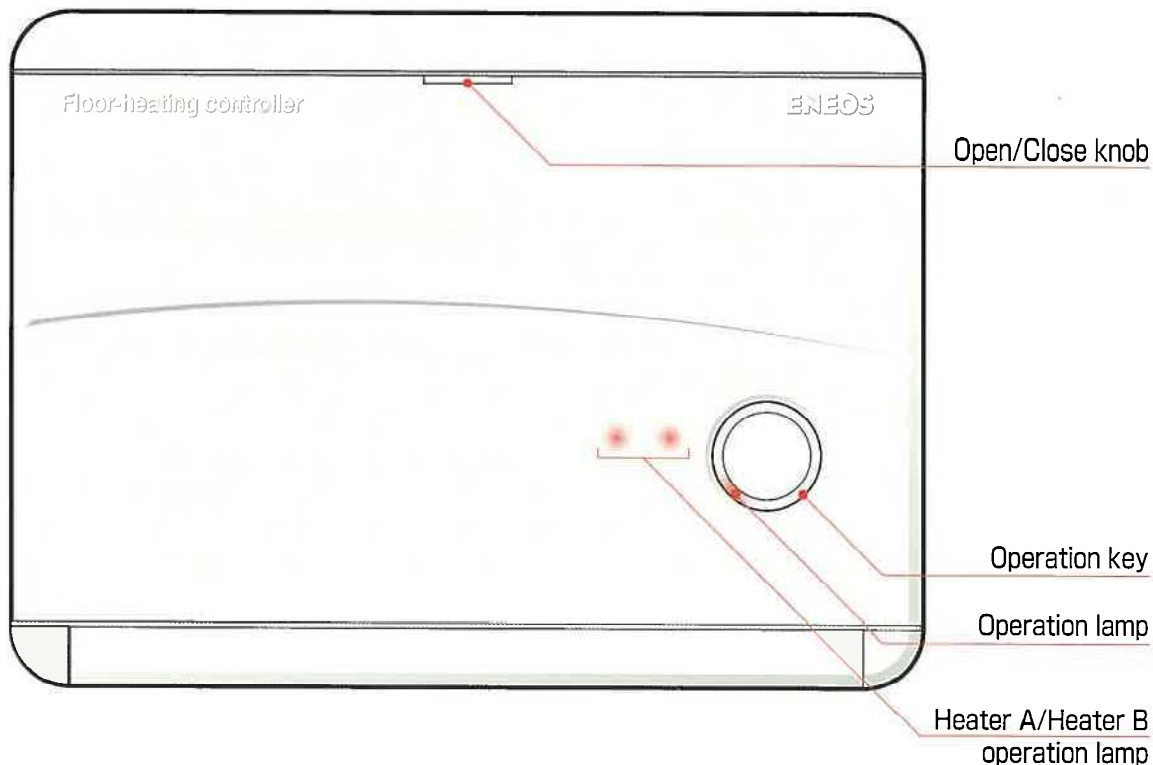







## YCT-32 Cover Type




# Using the controller



## 1 Setting time

To correct the time: Proceed to ①. When the time display is blinking: Proceed to ②.

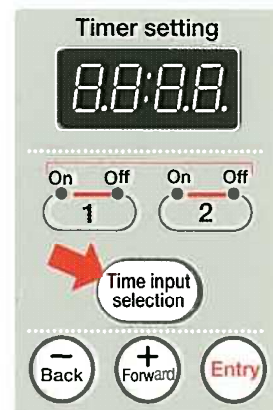- ① Make sure that the "timer setting mode switch lamp" is off.
- ②  Press and hold the timer input selection key for about 5 seconds. When the hour part of the time display starts to blink, release the key. 
- ③   Press the up and down keys to set the hour, and press the Entry key.  
- ④ The minute part of the time display starts to blink.
- ⑤   Press the up and down keys to set the minute, and press the Register key. 
- ⑥ Time setting is complete when ":" of the time display is blinking. 




## 2 Setting temperature



- ① When you press the  down key and  up key, the green lamp of the temperature setting 5-level lamp moves, allowing you to set the temperature.

As a guide, the temperature settings are 25°C (low), 30°C, 35°C, 40°C, and 45°C (high).

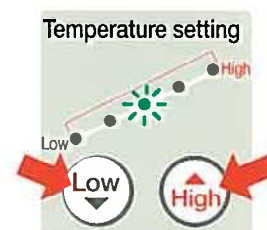\* The temperature values are the temperature of the floor heating system itself.



## 3 Operation

- ① When you press the Operation key,  the operation lamp illuminates and operation starts.
- ② When you press the Operation key during operation, the operation lamp goes off and operation stops. 




Operating




Operation paused


\* During operation, the Heating lamp goes on and off repeatedly to control the system to maintain a certain temperature. The Heating lamp goes off when the setting temperature is reached, and goes on when the temperature gets below the setting temperature.

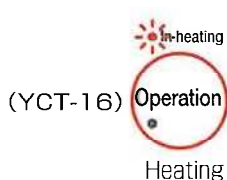

Heating

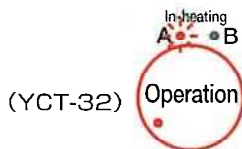

Heater A heating

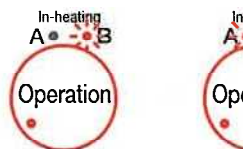

Heater B heating



Both sides heating

(YCT-16)

● In-heating



Operation

(YCT-32)

● In-heating










A ● B

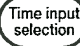










Operation



## 4 Setting Timer 1

### ● Setting operation start time (on) of Timer 1

- ①  Press the timer input selection key to turn on the Timer 1 On lamp.
- ② The hour part of the time display starts to blink. 
- ③   Press the up and down keys to set the hour, and press the Register key to confirm. 
- ④ The minute part of the time display starts to blink. 
- ⑤   Press the up and down keys to set the minute, and press the Register key to confirm. 






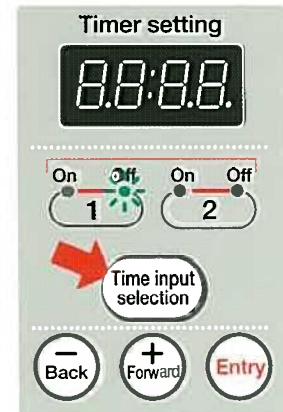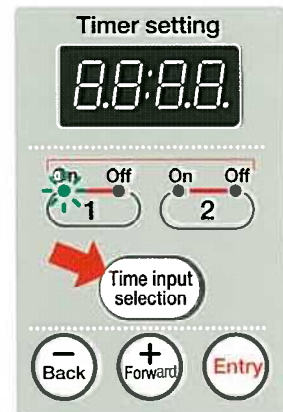



### ● Setting operation end time (off) of Timer 1

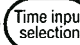- ①  Press the timer input selection key to turn on the Timer 1 Off lamp.
- ② The hour part of the time display starts to blink. 
- ③   Press the up and down keys to set the hour, and press the Register key to confirm. 
- ④ The minute part of the time display starts to blink. 
- ⑤   Press the up and down keys to set the minute, and press the Register key to confirm. 












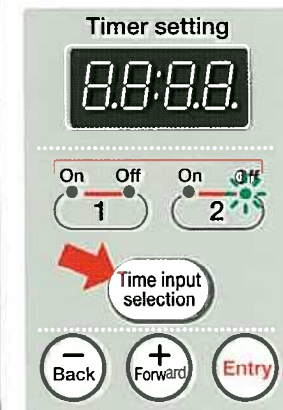
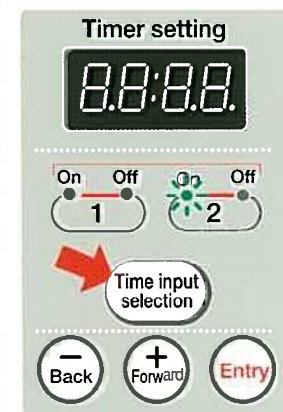
## Setting Timer 2

### ● Setting operation start time (on) of Timer 2








- ①  Press the timer input selection key to turn on the Timer 2 On lamp.
- ② The hour part of the time display starts to blink. 
- ③   Press the up and down keys to set the hour, and press the Register key to confirm. 
- ④ The minute part of the time display starts to blink. 
- ⑤   Press the up and down keys to set the minute, and press the Register key to confirm. 

### ● Setting operation end time (off) of Timer 2

- ①  Press the timer input selection key to turn on the Timer 2 Off lamp.
- ② The hour part of the time display starts to blink. 
- ③   Press the up and down keys to set the hour, and press the Register key to confirm. 
- ④ The minute part of the time display starts to blink. 
- ⑤   Press the up and down keys to set the minute, and press the Register key to confirm. 

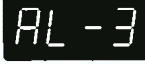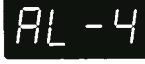

# Troubleshooting

Display	State	Control output	What to do
●AL-1 blinking 	Failure of the controller main body	Off	Turn off the breaker and consult with the builder.
●AL-2 and the current time displayed alternately 	A break of Sensor A or input below -13°C	Off	Turn off the breaker and consult with the builder.
●AL-3 and the current time displayed alternately 	A short-circuit of Sensor A or input over 63°C	Off	Turn off the breaker and consult with the builder.
●AL-4 and the current time displayed alternately 	A break of Sensor B or input below -13°C	Off	Turn off the breaker and consult with the builder.
●AL-5 and the current time displayed alternately 	A short-circuit of Sensor B or input over 63°C	Off	Turn off the breaker and consult with the builder.
●Operation lamp blinking 	Operation of the auto stop function	Off	 When you press the Operation key, the operation lamp goes off and the system stops.

# Ratings and specifications

## ●Controller for Yukaiina YCT-16

For rooms such as living rooms and dining rooms

- Dedicated controller for up to 16A
- Controller/relay integrated type
- Timer function that allows 2 settings of on/off for 24-hour repeated operation
- 12-hour auto stop function
- Safety design with both-off relay circuits

### ●Specifications

Rated voltage	AC100V/AC200V 50/60Hz
Rated load	16A × 1 circuit
Outer dimensions	116×120×50(32)mm(depth inside walls)
Temperature control	Relay on/off control via temperature sensor
Safety device	With shutoff alarm display function for disconnection, etc.

## ●Controller for Yukaiina YCT-32

Switchable between A and B faces. For larger space.

- Two-circuit individual operation mode optimal for large space. Functions of 2 units are integrated into 1 unit.
- Controller/relay integrated type
- Timer function that allows 2 settings of on/off for 24-hour repeated operation
- 12-hour auto stop function
- Safety design with both-off relay circuits

### ●Specifications

Rated voltage	AC100V/AC200V 50/60Hz
Rated load	16A × 2 circuit
Outer dimensions	162×120×50(32)mm(depth inside walls)
Temperature control	Relay on/off control via temperature sensor
Safety device	With shutoff alarm display function for disconnection, etc.

